

Super SQV Return Kit

Part Number: 71002-AT002

This item is exclusively for P/N 71004-AT012, 71007-AT012 (SSQV for TOYOTA SUPRA JZA80).

Parts List

Return Hose	1	Joint Hose	1
Hose Band #10	4	Blow-off Bracket	1
Installation Manual	1		

Manual Number: E04533-T43020-00



Published in October 15, 2009 by HKS Co., Ltd. (Unauthorized reproduction is strictly prohibited.)

Installation of SSQV Return Kit


1. Remove the SSQV assembly and bracket referring to the SSQV installation manual.
2. Remove the rubber cap that was installed with the SSQV kit.
3. Loosen the C-clip of the SSQV assembly. Rotate the blow-off valve on the blow-off adapter 160°. (Dia.1, Dia.4)

NOTE


The C-clip must be loosened before rotating the valve. Failure to do so may damage the valve.

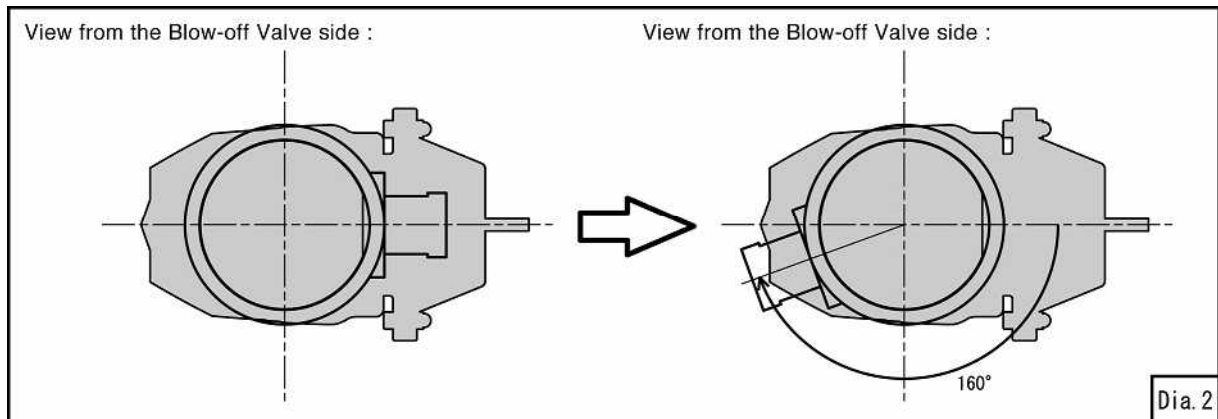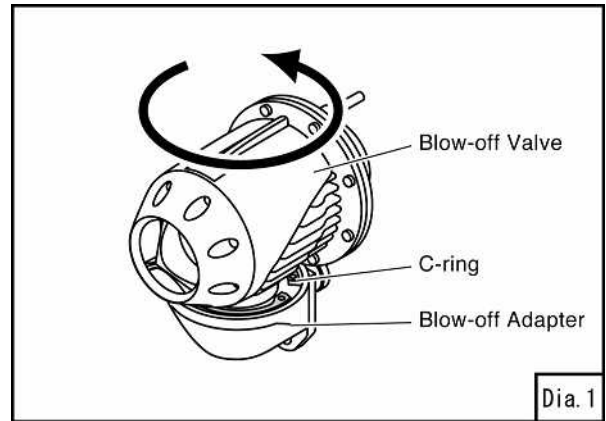

4. Install the Recirculation Fitting to the SSQV assembly referring to the SSQV installation manual.

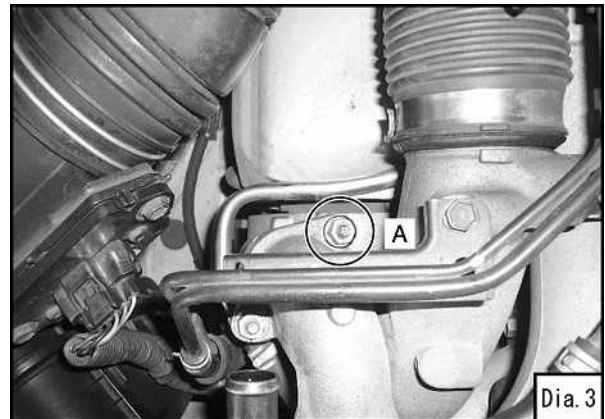

5. Install the provided blow-off bracket to the SSQV assembly. (Dia.4)
6. Install the joint hose and the SSQV assembly. (Dia.4)
7. Install the provided return hose. (Dia.4)

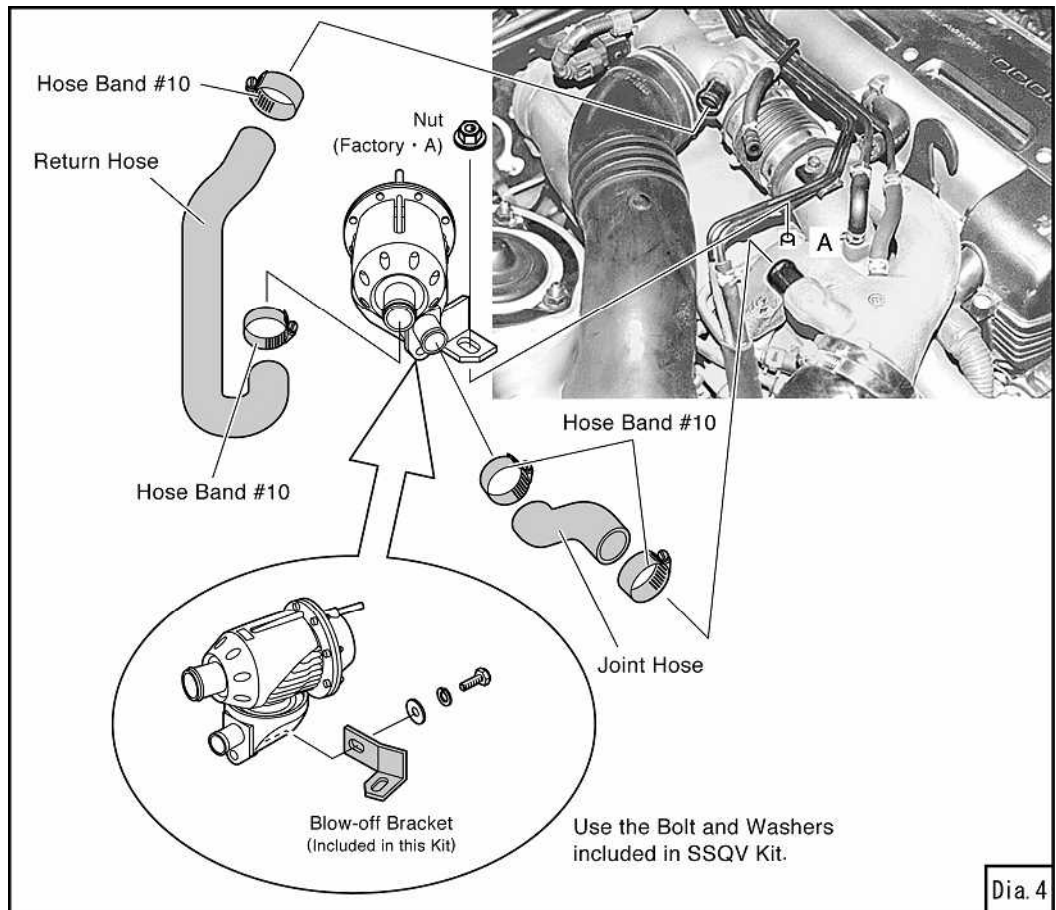

8. Install the vacuum hose referring to the SSQV installation manual.

